



Sportworks Northwest Inc. | 15540 Wood Red Rd NE, Bldg A-200 | Woodinville, WA 98072 | www.sportworks.com
Contact: Tel: 425-483-7000 | Fax: 425-488-9001 | salesandsupport@sportworks.com
All dimensions in inches. All dimensions and specifications nominal. Specifications are subject to change without notice. Copyright © 2011 Sportworks Northwest, Inc. All rights reserved.

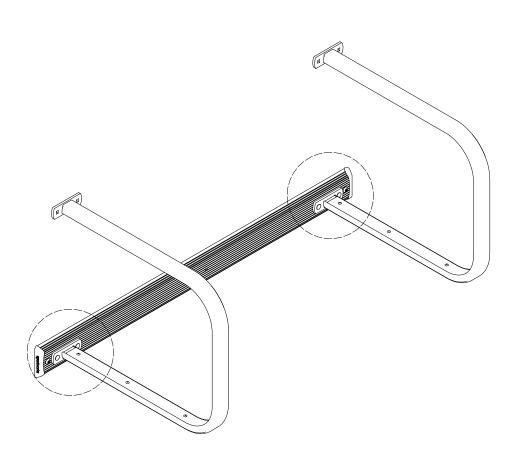



- 1. Orient the two end racks on their side as shown and assemble one mounting rail to the rack feet closest to the ground. Ensure anti-sieze compound is applied to all fasteners.
- 2. For the second rail, insert only one fastener in the outside hole of one of the rack feet as shown.

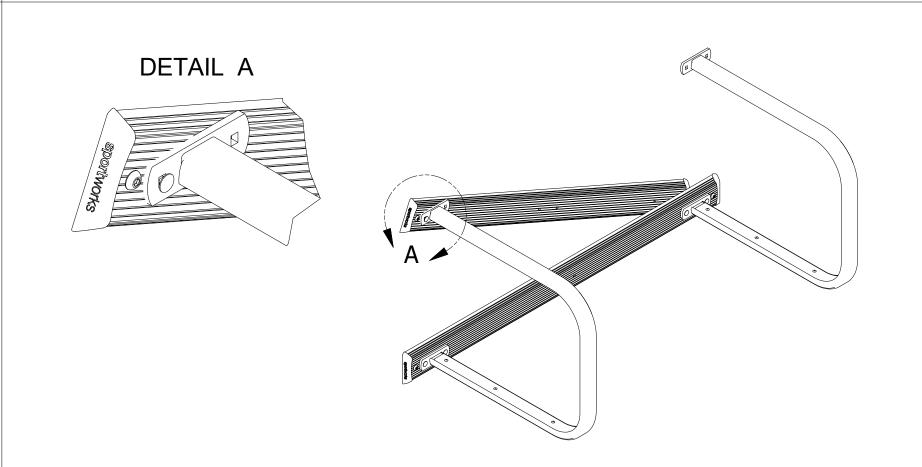



- 3. Rotate the opposite end of the rail up to the other bike rack foot and install all fasteners in both racks.
- 4. Install remaining racks and fasteners. Remove the endcap fasteners shown if rails are to be ground mounted. Ground anchors will retain endcaps. Tip assembly upright as shown.

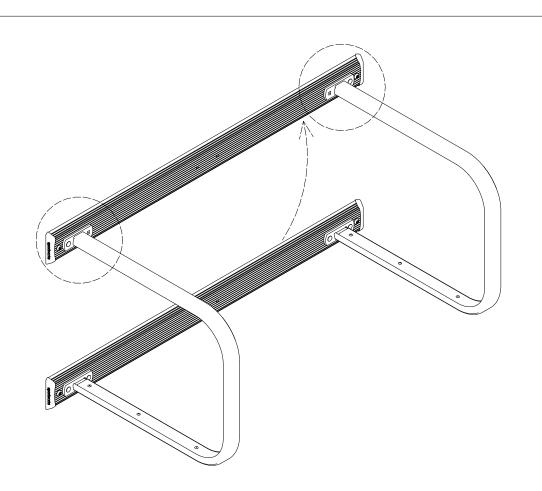

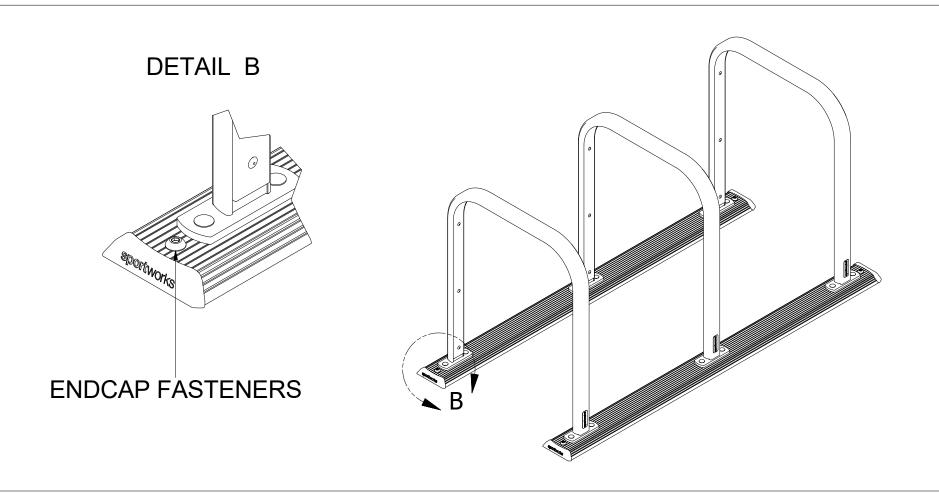

Sportworks Northwest Inc. | 15540 Wood Red Rd NE, Bldg A-200 | Woodinville, WA 98072 | www.sportworks.com Contact: Tel: 425-483-7000 | Fax: 425-488-9001 | salesandsupport@sportworks.com

All dimensions in inches. All dimensions and specifications nominal. Specifications are subject to change without notice. Copyright © 2011 Sportworks Northwest, Inc. All rights reserved.